

**Mounting instructions OptiFlow**  
Audi A4 2,0T 2005 -->

**Proposal of tools:**

Wrench 8mm  
Polygrip  
Torx 25  
Phillips screwdriver  
Screwdriver


**Material overview:**



**1.** Remove the inlet pipe (1).




**2.** Remove the filter from the inlet pipe (2).

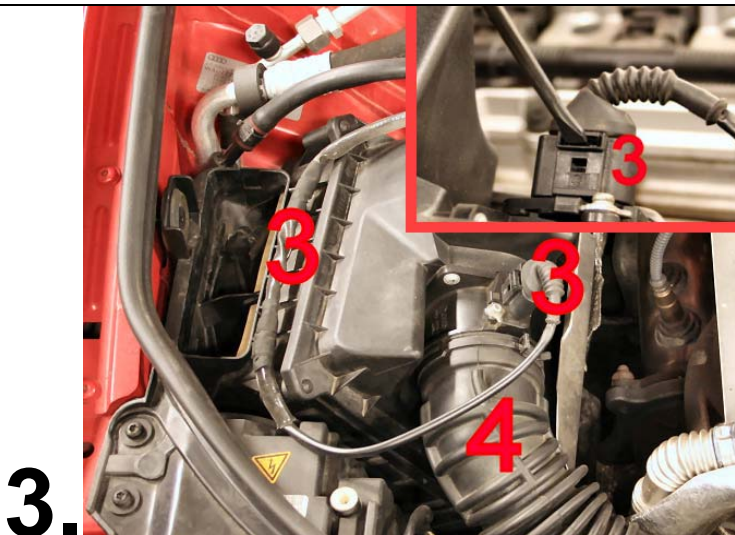

**3.** Remove the electrical harness (3) from the air box. Use screwdriver as shown to remove the harness plug. Remove the intake hose (4) from the MAS (Mass air sensor).




**4.** Remove the air box from the car (5), then remove the MAS from the air box.

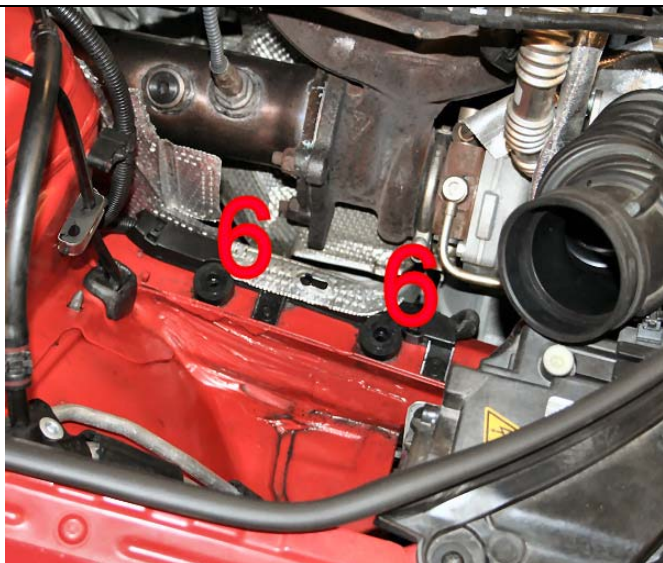

**5.**

If needed, replace the rubber lead-throughs (6). (a new pair is enclosed)

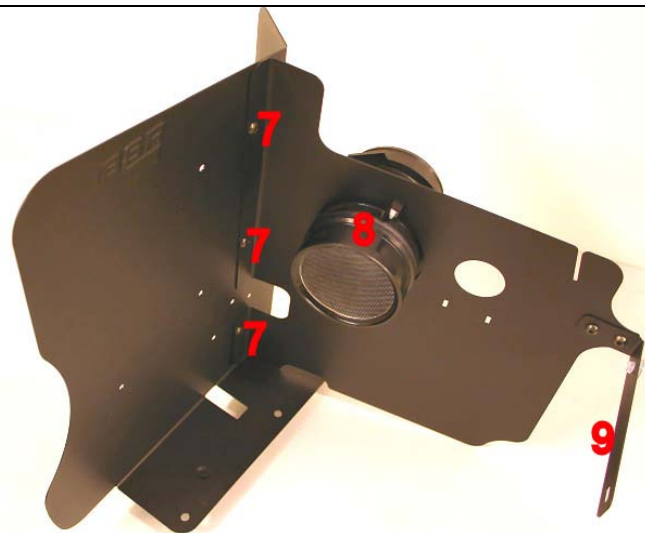

**6.**


Put together the two plates with the enclosed screws and nuts [M5] (7).

Assemble the MAS (8), to the plate. Use the enclosed clips and original screws. Assemble the rod/bracing (9). Attach the transparent rubber bushings to it as protection for the chassi.



**7.**


Remove the plastic clips (10). Remove the screw (11).

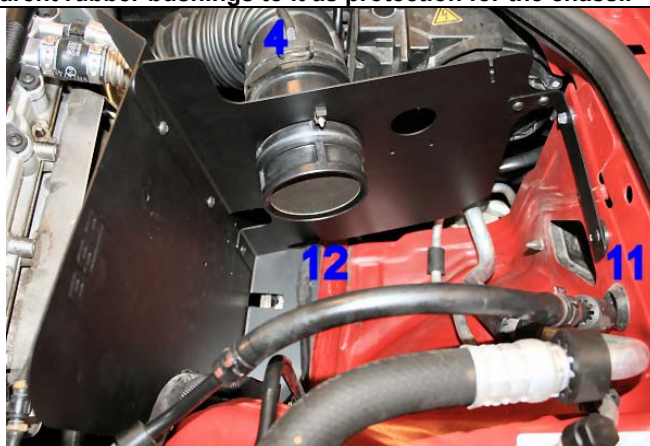

**8.**

Assemble the plate. Fit the plates steering pins in the rubber lead throughs. Assemble the intake hose (4) to the MAS, and the rod/bracing to the chassi (11), use original screws. (Put the rubber washer between the rod and the chassi.)

Assemble the electrical harness (12). Use original clips and fasten to the heatshield.

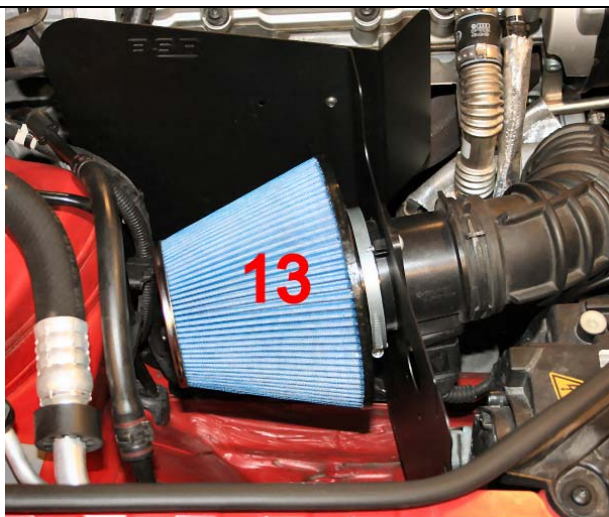

**9.**

Assemble the sport air filter, tighten very easy. Just so it does not fall off.



**10.**

Assemble the inlet pipe (1). Push the inlet pipe down easy against the plate (14).  
Enjoy.