

Assembly instruction Optiflow Saab 900/9-3 T5

Proposal of tools:

Wrench 10mm
Hex key 5 mm
Phillips screwdriver


Material overview:



1.

Remove air hose from the air box.

Remove the screws (1) 3 attach points then lift out the air box.

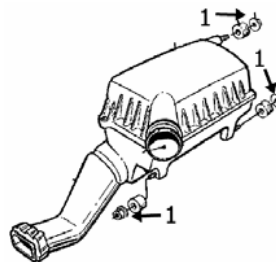

2.

Assemble the plate, use original holdings.

Assemble the air hose, tighten.

Assemble BSR air filter, tighten

(Do not tighten the hose clamps to hard)

